

821 BROCK RD. UNIT 1  
 PICKERING, ONT  
 L1W 3L6  
 TEL:(905)837-1115  
 FAX:(905)837-7588

SOLD TO:

WALL PATTERN: \_\_\_\_\_  
 FLOOR PATTERN: \_\_\_\_\_  
 MIL: \_\_\_\_\_

TAG NAME: \_\_\_\_\_  
 DATE: \_\_\_\_\_  
 P.O: \_\_\_\_\_

RIGHT HAND  
 STANDING FROM S.E

MUST PROVIDE PERIMETER  
 TOTAL: \_\_\_\_\_

SAFETY LEDGE  
 IF LEDGE VARIES PLEASE INDICATE  
 [ ] NO [ ] YES  
 RIGHT LEDGE \_\_\_\_\_ IN. LEFT LEDGE \_\_\_\_\_ IN.  
 END LEDGE \_\_\_\_\_ IN.

CHECK OFF BEAD TYPE  
 [ ] STANDARD  
 [ ] OTHER \_\_\_\_\_  
 [ ] NO BEAD \_\_\_\_\_ IN. OVERLAP

INSTRUCTIONS:

STEP 1: Position 2 stakes (A & B) at least 10' apart as shown in the diagram. When positioning the stakes make sure that they are parallel to the longest length of the pool and a least 3' away from the pool.  
 \*Note: Do not remove until the liner has been installed.

STEP 2: Define the break-off and pad with measurements from these stakes.



STEP 3: Define the shape of the POOL by taking measurements, approximately every 2' around the perimeter of the pool.

\*NOTE: Decrease the distance between the points you are using to 6' around the reverse or small radius.

STEP 4: Fill in the other measurements required as indicated by the boxes provided.

\*NOTE: PERIMETER MUST BE PROVIDED SO THAT THE PLOT MEASUREMENTS CAN BE VERIFIED!!!


STEP 5: If stakes are positioned differently from the drawing indicate the position.

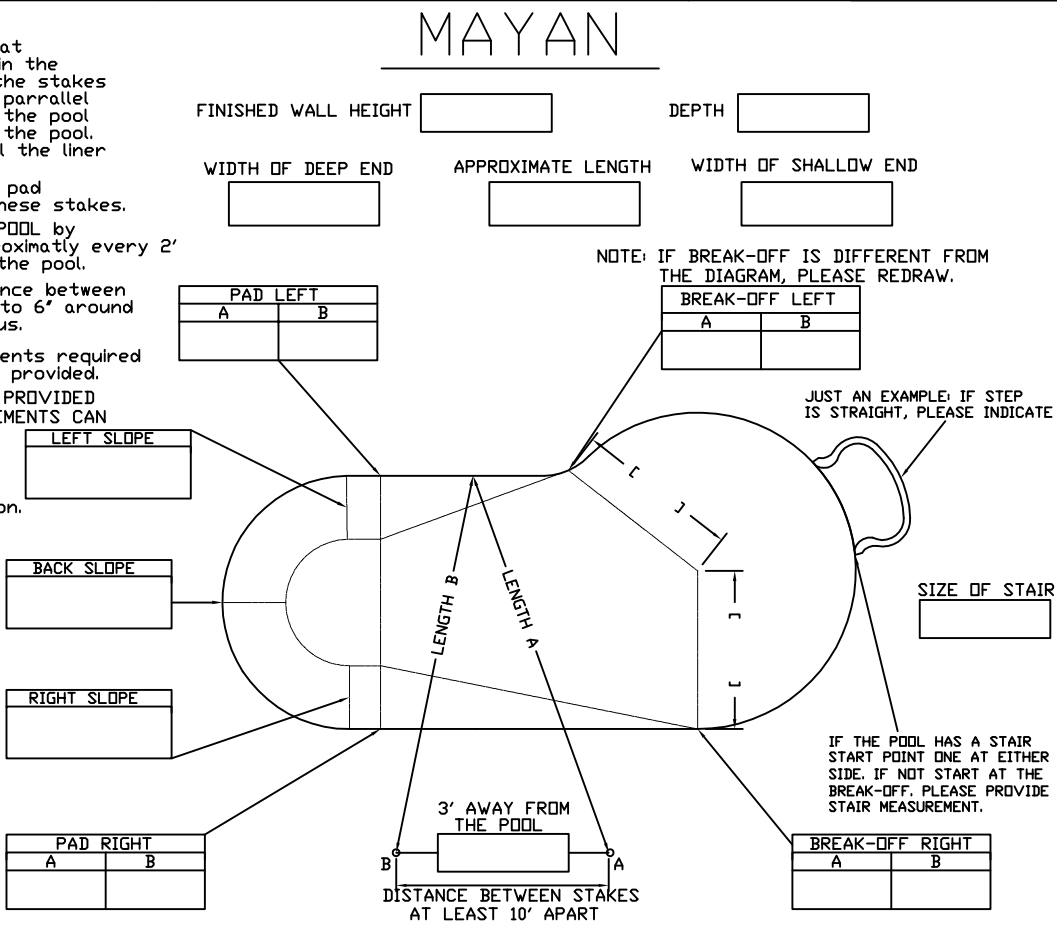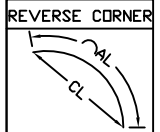

MEASUREMENTS

	A	B	A	B
1		31		
2		32		
3		33		
4		34		
5		35		
6		36		
7		37		
8		38		
9		39		
10		40		
11		41		
12		42		
13		43		
14		44		
15		45		
16		46		
17		47		
18		48		
19		49		
20		50		
21		51		
22		52		
23		53		
24		54		
25		55		
26		56		
27		57		
28		58		
29		59		
30		60		

COVE PROFILE

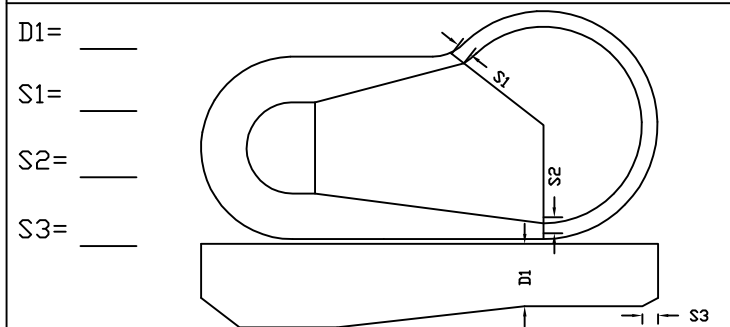

DEEPER BREAK PROFILE

