

821 BROCK RD, UNIT 1 PICKERING, ONT L1W 3L6 TEL:(905)837-1115 FAX:(905)837-7588	SOLD TO:	WALL PATTERN: _____ FLOOR PATTERN: _____ MIL: _____	TAG NAME: _____ DATE: _____ P.O: _____
---------------------------------------------------------------------------------------------	----------	-----------------------------------------------------------	----------------------------------------------

RIGHT HAND
STANDING FROM S.E

MUST PROVIDE PERIMETER
TOTAL: _____


SAFTEY LEDGE
IF LEDGE VARIES PLEASE INDICATE
[] NO [] YES
RIGHT LEDGE _____ IN. LEFT LEDGE _____ IN.
END LEDGE _____ IN.

CHECK OFF BEAD TYPE
[] STANDARD
[] OTHER _____
[] NO BEAD _____ IN. OVERLAP

INSTRUCTIONS:

- STEP 1:** Position 2 stakes (A & B) at least 10' apart as shown in the diagram. When positioning the stakes make sure that they are parallel to the longest length of the pool and a least 3' away from the pool.
*Note: Do not remove until the liner has been installed.
- STEP 2:** Define the break-off and pad with measurements from these stakes.
- STEP 3:** Define the shape of the POOL by taking measurements, approximately every 2' around the perimeter of the pool.
*NOTE: Decrease the distance between the points you are using to 6' around the reverse or small radius.
- STEP 4:** Fill in the other measurements required as indicated by the boxes provided.
*NOTE: PERIMETER MUST BE PROVIDED SO THAT THE PLOT MEASUREMENTS CAN BE VERIFIED!!!
- STEP 5:** If stakes are positioned differently from the drawing, indicate the position.

INDICATE CORNER TYPE

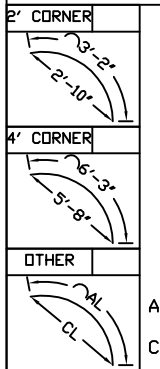

LEFT SLOPE: _____


BACK SLOPE: _____

RIGHT SLOPE: _____

PAD LEFT: A _____ B _____

PAD RIGHT: A _____ B _____

ORBIT

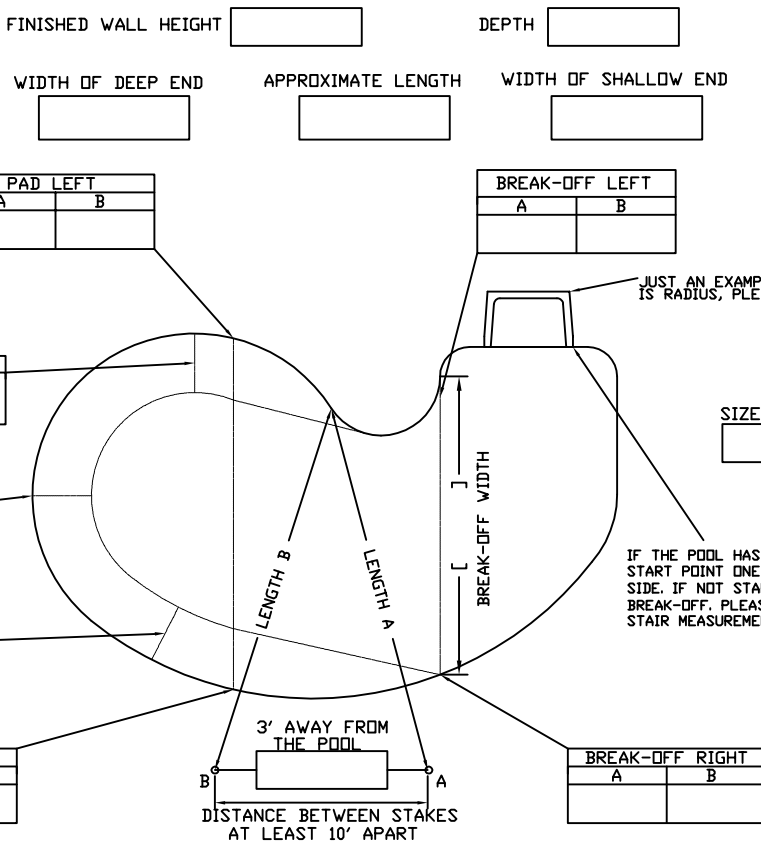

MEASUREMENTS

	A	B	A	B
1		31		
2		32		
3		33		
4		34		
5		35		
6		36		
7		37		
8		38		
9		39		
10		40		
11		41		
12		42		
13		43		
14		44		
15		45		
16		46		
17		47		
18		48		
19		49		
20		50		
21		51		
22		52		
23		53		
24		54		
25		55		
26		56		
27		57		
28		58		
29		59		
30		60		

